

QF-N150A

QBiX-Firewall Industry network appliance system
Quick Start Guide

Copyright Notice

This document is copyrighted, 2026. All rights are reserved. The original manufacturer reserves the right to make improvements to the products described in this manual at any time without notice.

No part of this manual may be reproduced, copied, translated, or transmitted in any form or by any means without the prior written permission of the original manufacturer. Information provided in this manual is intended to be accurate and reliable. However, the original manufacturer assumes no responsibility for its use, or for any infringements upon the rights of third parties that may result from its use.

The material in this document is for product information only and is subject to change without notice. While reasonable efforts have been made in the preparation of this document to assure its accuracy, GIGAIPC assumes no liabilities resulting from errors or omissions in this document, or from the use of the information contained herein.

GIGAIPC reserves the right to make changes in the product design without notice to its users.

Acknowledgement

All other products' name or trademarks are properties of their respective owners.

- Microsoft Windows is a registered trademark of Microsoft Corp.
- Intel, Pentium, Celeron, and Xeon are registered trademarks of Intel Corporation
- Core, Atom are trademarks of Intel Corporation
- ITE is a trademark of Integrated Technology Express, Inc.
- IBM, PC/AT, PS/2, and VGA are trademarks of International Business Machines Corporation.

All other product names or trademarks are properties of their respective owners.

Packing List

Before setting up your product, please make sure the following items have been shipped:

Item	Quantity
System kit	1
Power Cord : Optional (by region)	1
PSU ADP 19V 65W 100-240VAC (25EP1-100651-A3S)	1

If any of these items are missing or damaged, please contact your distributor or sales representative immediately.

About this Document

This User's Manual contains all the essential information, such as detailed descriptions and explanations on the product's hardware and software features (if any), its specifications, dimensions, jumper/connector settings/definitions, and driver installation instructions (if any), to facilitate users in setting up their product.

Users may refer to the GIGAIPC.com for the latest version of this document.

Safety Precautions

Please read the following safety instructions carefully. It is advised that you keep this manual for future references

1. All cautions and warnings on the device should be noted.
2. Make sure the power source matches the power rating of the device.
3. Position the power cord so that people cannot step on it. Do not place anything over the power cord.
4. Always completely disconnect the power before working on the system's hardware.
5. No connections should be made when the system is powered as a sudden rush of power may damage sensitive electronic components.
6. If the device is not to be used for a long time, disconnect it from the power supply to avoid damage by transient over-voltage.
7. Always disconnect this device from any AC supply before cleaning.
8. While cleaning, use a damp cloth instead of liquid or spray detergents.
9. Make sure the device is installed near a power outlet and is easily accessible.
10. Keep this device away from humidity.
11. Place the device on a solid surface during installation to prevent falls
12. Do not cover the openings on the device to ensure optimal heat dissipation.

13. Watch out for high temperatures when the system is running.
14. Do not touch the heat sink or heat spreader when the system is running
15. Never pour any liquid into the openings. This could cause fire or electric shock.
16. As most electronic components are sensitive to static electrical charge, be sure to ground yourself to prevent static charge when installing the internal components. Use a grounding wrist strap and contain all electronic components in any static-shielded containers.
17. If any of the following situations arises, please the contact our service personnel:
 - i. Damaged power cord or plug
 - ii. Liquid intrusion to the device
 - iii. Exposure to moisture
 - iv. Device is not working as expected or in a manner as described in this manual
 - v. The device is dropped or damaged
 - vi. Any obvious signs of damage displayed on the device
18. **DO NOT LEAVE THIS DEVICE IN AN UNCONTROLLED ENVIRONMENT WITH TEMPERATURES BEYOND THE DEVICE'S PERMITTED STORAGE TEMPERATURES (SEE CHAPTER 1) TO PREVENT DAMAGE.**

FCC Statement

Warning!



This device complies with Part 15 FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

Caution:

There is a danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions and your local government's recycling or disposal directives.

Attention:

Il y a un risque d'explosion si la batterie est remplacée de façon incorrecte. Ne la remplacer qu'avec le même modèle ou équivalent recommandé par le constructeur. Recycler les batteries usées en accord avec les instructions du fabricant et les directives gouvernementales de recyclage.

High Temperature Warning

(1) This equipment is intended to be used in Restrict Access Location. The access can only be gained by Skilled person or by Instructed person who have been instructed about the metal chassis of the equipment is so hot that Skilled person have to pay special attention or take special protection. Only authorized by well trained professional person can access the restrict access location.

(2) External metal parts are hot!! Before touching it, special attention or protection is necessary



Table Contents

QBiX-Firewall Industry network appliance system	1
Quick Start Guide	
Copyright Notice	2
Acknowledgement	3
Packing List.....	4
About this Document	5
Safety Precautions	6
FCC Statement.....	8
High Temperature Warning	8
 Chapter 1 - Product Specifications	 13
1.1 Specifications : QF-N150A	15
 Chapter 2 – Industrial Embedded System Kit	 17
2.1 Dimension	18
2.2 Getting Familiar with Your Unit.....	19
2.3 A) Memory Installation: DDR5 SO-DIMM	21
2.4 B) Wireless Module : How to safely install the Module (Wireless Module inclusion may vary based on local distribution)	22
2.5 C) M.2 SSD Installation: How to safely install the M.2 2280 SSD	23
2.6 Antenna Installation (Antenna inclusion may vary based on local distribution)	24
2.7 Wall mount Bracket Installation.....	25

2.8	VESA mount Bracket Installation	26
2.9	Cable Pin-define	27
2.10	Support	28
2.11	Safety and Regulatory Information.....	29

Chapter 3 – Hardware Information 30


3.1	Jumpers and Connectors	31
3.2.1	FAN (FAN connector)	34
3.2.2	AT_CN (AT/ATX mode select jumper).....	35
3.2.3	GPIO_CNT (General Purpose input/output header) ...	36
3.2.4	COM2 (Serial port header).....	37
3.2.5	M2M (M.2 Slot, 2280 M-Key)	38
3.2.6	DC_IN (DC IN 1x4pin power connector)	39
3.2.7	BATTERY (Battery cable connector).....	40
3.2.8	SODIMMA (DDR5 SO-DIMM socket).....	41
3.2.9	ME (ME Disable jumper)	42
3.2.10	M2E (M.2 slot, 2230 E-key)	43
3.2.11	LAN1_LED, LAN2_LED, LAN3_LED, LAN4_LED LAN5_LED, LAN6_LED (LAN LEDs).....	44
3.2.12	USB20 (USB 2.0 port x 2).....	45
3.2.13	USB32 (USB 3.2 Gen 2x2 port x 2)	46
3.2.14	HDMI (HDMI connector)	47
3.2.15	PWR_BUTTON (Power button)	48
3.2.16	RJ45_COM1 (Serial Port (RS-232)(RJ45 type))	49
3.2.17	LAN1, LAN2, LAN3, LAN4, LAN5, LAN6 (LAN connector x 6)	50

Chapter 4 – BIOS	51
4.1 Introduction	52
4.2 The Main Menu.....	53
4.3 Advanced	54
4.3.1 TPM Configuration.....	55
4.3.2 CPU Configuration	57
4.3.3 Memory Configuration	58
4.3.4 IT8786 Super IO Configuration	59
4.3.5 Hardware Monitor	60
4.3.6 S5 RTC Wake Settings	61
4.3.7 Serial Port Console Redirection - COM1.....	62
4.3.7 Serial Port Console Redirection - Serial Port for Out-of-Band Management/ Windows Emergency Management Services (EMS)	63
4.3.8 Network Stack Configuration.....	64
4.3.9 NVMe Configuration.....	65
4.3.10 Digital IO Port Configuration	66
4.3.11 Tls Auth Configuration	67
4.3.12 Realtek PCIe 2.5GBE Family Controller (MAC: 30:56:0F:C3:19:A0)(MAC address may varied based on different motherboard)	68
4.3.13 Realtek PCIe 2.5GBE Family Controller (MAC: 30:56:0F:C3:19:A1)(MAC address may varied based on different motherboard)	69
4.3.14 Realtek PCIe 2.5GBE Family Controller (MAC: 30:56:0F:C3:19:A2)(MAC address may varied based on different	

	motherboard)	70
4.3.15	Realtek PCIe 2.5GBE Family Controller (MAC: 30:56:0F:C3:19:A3)(MAC address may varied based on different motherboard)	71
4.3.16	Realtek PCIe 2.5GBE Family Controller (MAC: 30:56:0F:C3:19:A4)(MAC address may varied based on different motherboard)	72
4.3.17	Realtek PCIe 2.5GBE Family Controller (MAC: 30:56:0F:C3:19:A5)(MAC address may varied based on different motherboard)	73
4.4	Chipset	74
4.5	Security	75
4.6	Boot.....	78
4.7	Save & Exit	79

Chapter 1

Chapter 1 - Product Specifications

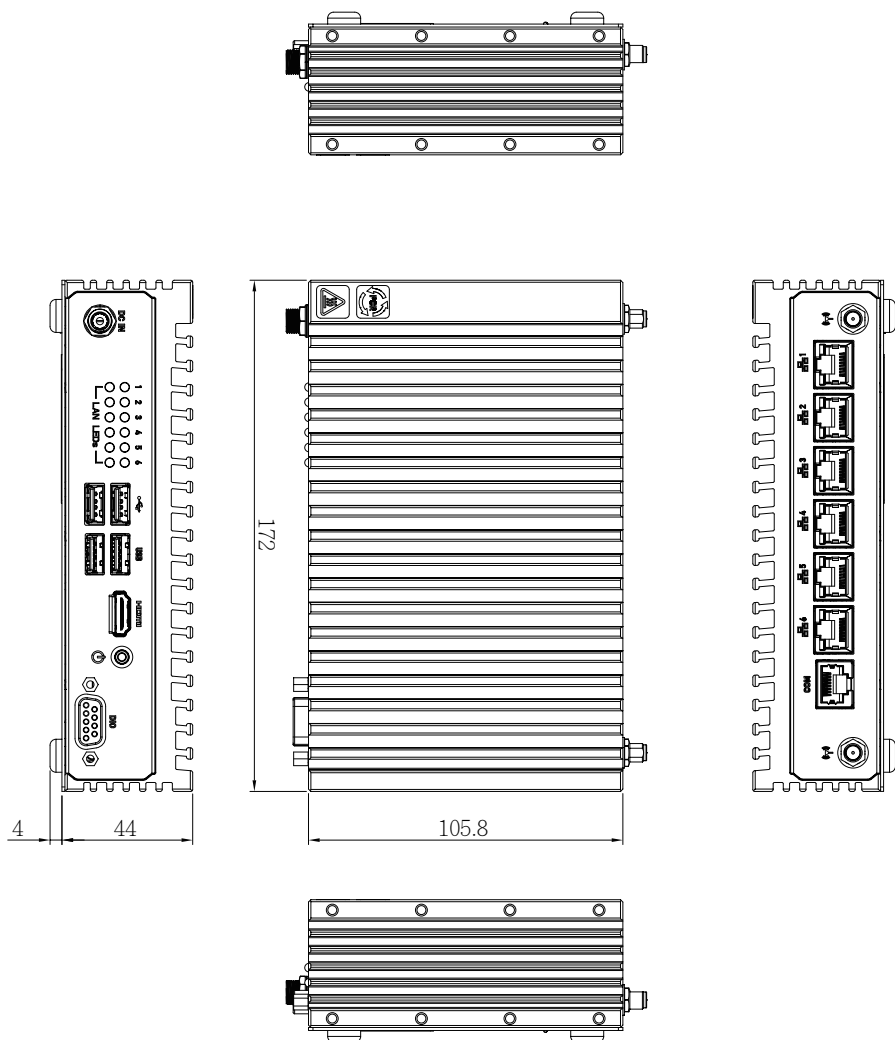

1.1 Specifications : QF-N150A

System	QF-N150A
Dimension	172W x 105.8D x 44H(mm)
CPU	Intel® Processor N150 Intel 7, 4 cores, up to 3.60 GHz
Memory	1 x DDR5 SO-DIMM sockets, Max. Capacity 16 GB Support Single channel DDR5 4800 MHz memory modules
Ethernet	6 x 2.5GbE LAN Ports (Realtek® RTL8125D)
Graphic support	Integrated Graphics Processor - Intel® Graphics support: 1 x HDMI 2.0 port, supporting a maximum resolution of 4096x2160 @60Hz
Expansion Slots	1 x 2280 M.2 M-Key (PCIe Gen3x2) 1 x 2230 M.2 E-Key
Front I/O	6 x RJ45 LAN Ports 1 x Console Port (RS-232)(RJ45 Type) 2 x External Antenna Holes (Optional)
Rear I/O	1 x 8bits GPIO 1 x Power button 1 x HDMI 2 x USB 3.2 Gen 2 (10 Gbps) 2 x USB 2.0 6 x LAN status LED 1 x DC Jack (Screw Type)
TPM	Onboard TPM 2.0 security chip INFINEON SLB9670VQ2.0
Power	+12V~36VDC (19V/65W)
OS Compatibility	Windows 11 IoT Enterprise, version 25H2, x64 Windows 11 Enterprise LTSC 2024 Windows 11 IoT Enterprise LTSC 2024, x64 Windows 11 IoT Enterprise, version 24H2 x64
Operation temperature	Operating temperature: 0°C to 50°C Operating humidity: 40°C @ 20-95% (non-condensing) Non-operating temperature: -40°C to 85°C Non-operating humidity: 60°C @ 95% (non-condensing) Use wide temperature range memory and storage

System	QF-N150A
Vibration During Operation	Operation: IEC 60068-2-64, 3 Grms, random, 5 ~ 500 Hz, 1 hr / Per Axis, With SSD/M.2 2280 Non-operation: IEC 60068-2-6, 2 G, Sine, 10 ~ 500 Hz, 1 Oct/min, 1 hr / Per Axis
Shock During Operation	Operation: IEC 60068-2-27, 50 G, half sine, 11 ms duration, With SSD
Packaging Content	Carton size: 590 x 321 x 238 (mm) Packing Capacity: 5pcs Single Box size: 301 x 198 x 112 (mm) Including: Power Cord : Optional (by region) PSU ADP 19V 65W 100-240VAC x 1 (P/N: 25EP1-100651-A3S)
Mounting	Wall mount P/N: 25HB2-CGAA20-CHR x 1 (Optional) VESA 75/100 P/N: 25HB1-TPL021-S8R x 1 + 12KSZ-000001-00R x 1 (Screw) (Optional)
Order Information	System : 6BQFN150AMR-SI (Box packing)


Chapter 2

Chapter 2 – Industrial Embedded System Kit




2.2 Getting Familiar with Your Unit


[Front Side]

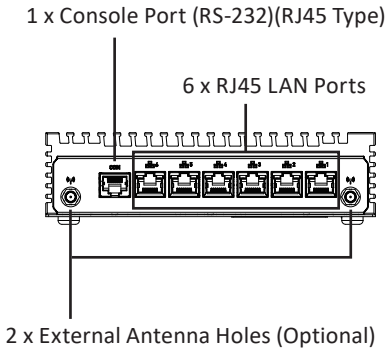


[Left Side]



[Rear Side]

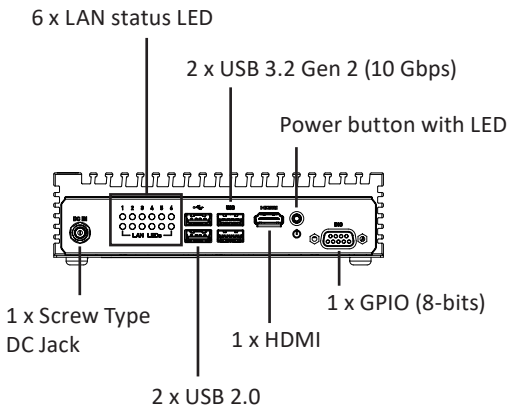


[Right Side]




[Install]

- * Before opening the case, make sure to unplug the power cord.
- * Before Connecting the power, make sure to fasten the case securely.

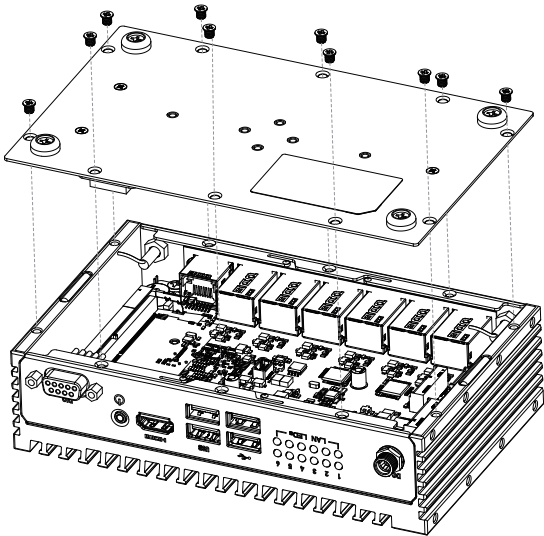

[Bottom PCB Side]


	Information
A	1 x DDR5 SO-DIMM socket
B	1 x M.2 slot 2230 E-Key
C	1 x M.2 slot 2280 M-Key

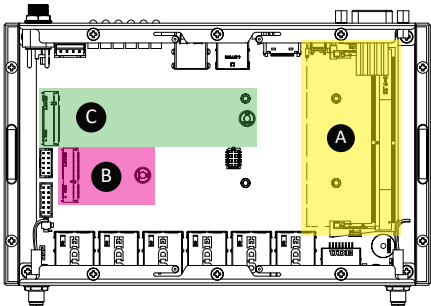

2.3 A) Memory Installation: DDR5 SO-DIMM


1

Carefully insert SO-DIMM memory modules.

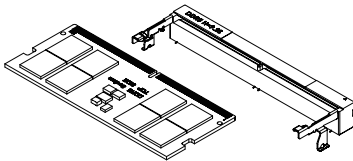


2

Push down until the modules click into place.

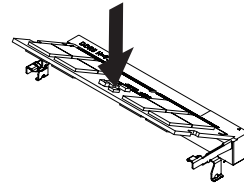

3


Make sure the module is completely installed.

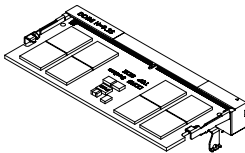

2.4 B) Wireless Module : How to safely install the Module (Wireless Module inclusion may vary based on local distribution)


1

Remove the screw from the screw hole. (Location : MSO3)

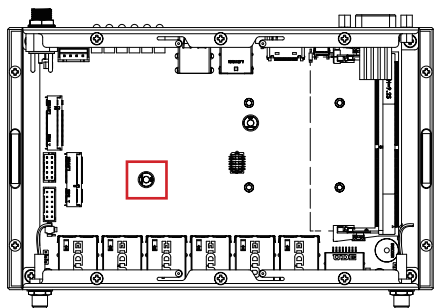


2

Carefully insert the wireless module into the M.2 slot.

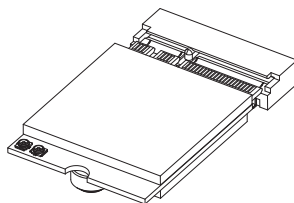


3

Lock the screw in the middle.

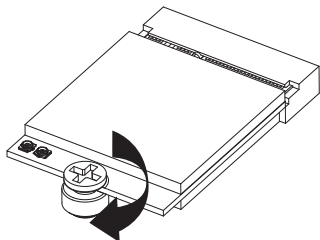

4


Install the antenna on the left side of the connection wireless module down.

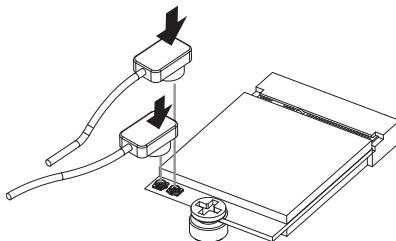

2.5 C) M.2 SSD Installation: How to safely install the M.2 2280 SSD


1

Remove the screw from the screw hole
(Location : MSO2)

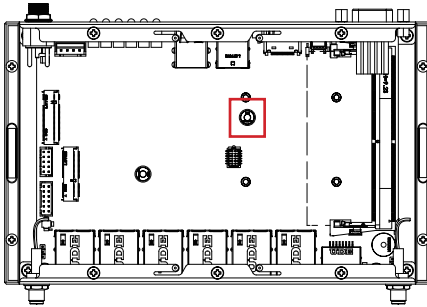

2


Carefully insert the M.2 SSD into the slot, and secure with the screw.

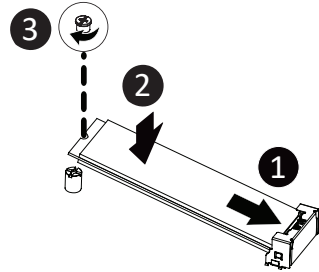

2.6 Antenna Installation (Antenna inclusion may vary based on local distribution)


1

Carefully insert the antennas into the connectors.

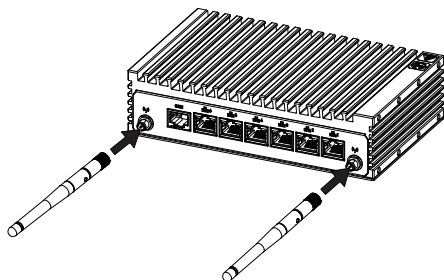


2

Turn the antennas clockwise until they are completely secure on the connectors.

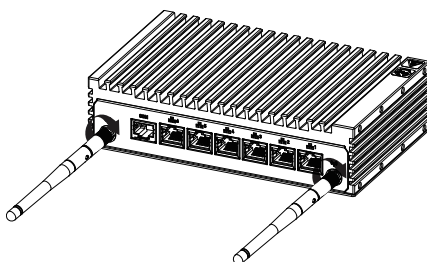

3


Flip up the antenna heads so that they are perpendicular to the machine.

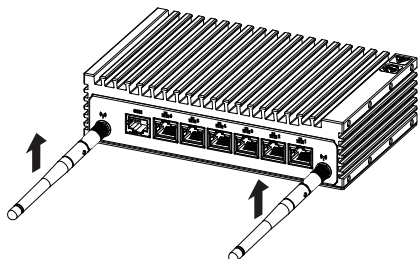

2.7 Wall mount Bracket Installation


1

Unscrew 4 screws on the bottom cover.

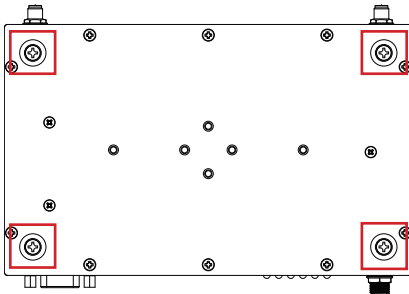

2


Install the wall mount brackets using the screws included in the optional kit.

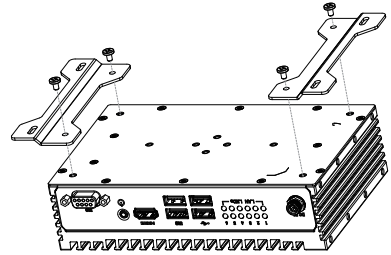

NOTE : The wall mount brackets are the optional parts.

3

Wall mount bracket installation completed.

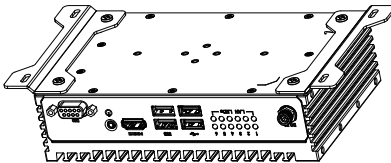

NOTE : The wall mount brackets are the optional parts.

4

Suggest screws as below for different type of surface.

Concrete wall



Electric drill



Wall anchors
ST3.2 x 30mm



Self-tapping screw
ST3.2 x 25mm

Wooden wall



Self-tapping screw
ST3.2 x 25mm

Machine




Machine screw
M3 x 10mm pan head, with
Spring washer + flat washer

2.8 VESA mount Bracket Installation

1

Lock 2 screws on the bottom cover.


Screws type : M3-3L x 2pcs, including in the optional kit.

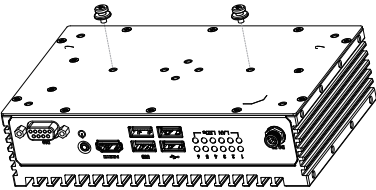

2

Attach the VESA mount to the rear of a compatible display using the screws provided.


VESA hole patterns : 75 x 75mm and 100 x 100mm
Screws type : M4-10L x 4pcs

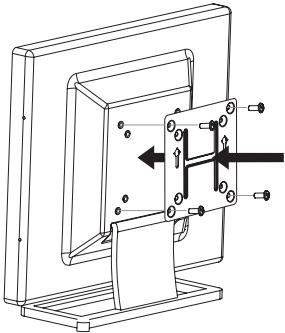

NOTE : The wall mount brackets are the optional parts.

3


The QF-N150A can now be mounted by sliding the device into place.

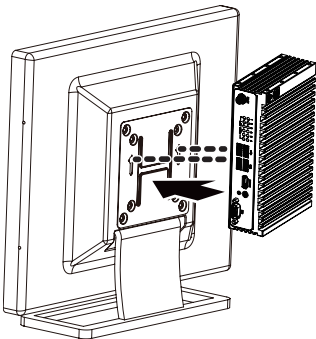

NOTE : The wall mount brackets are the optional parts.

2.9 Cable Pin-define

1. DBP DIO (25CR5-150606-S9R)

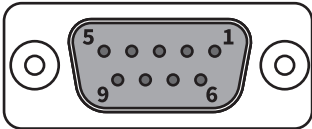

DBP DIO Pin	Pin Name
1	GPIO-output_1
2	GPIO-input_1
3	GPIO-output_2
4	GPIO-input_2
5	GPIO-output_3
6	GPIO-input_3
7	GPIO-output_4
8	GPIO-input_4
9	5V

2.10 Support

- For AVL list, go to: <http://www.gigaipc.com>
- To download the latest drivers, go to: <http://www.gigaipc.com>
- For product support, go to: <http://www.gigaipc.com>

2.11 Safety and Regulatory Information

Risk of explosion if the battery is replaced with an incorrect type. Batteries should be recycled where possible.

Disposal of used Batteries must be in accordance with local environmental regulations.

Failure to use the included Power Adapter may violate regulatory compliance and may expose the user to safety hazards.





At the end of its serviceable life, this product should not be treated as household or general waste. It should be handed over to the applicable collection point for the recycling of electrical and electronic equipment, or returned to the supplier for disposal.

Chapter 3

Chapter 3 – Hardware Information

3.1 Jumpers and Connectors

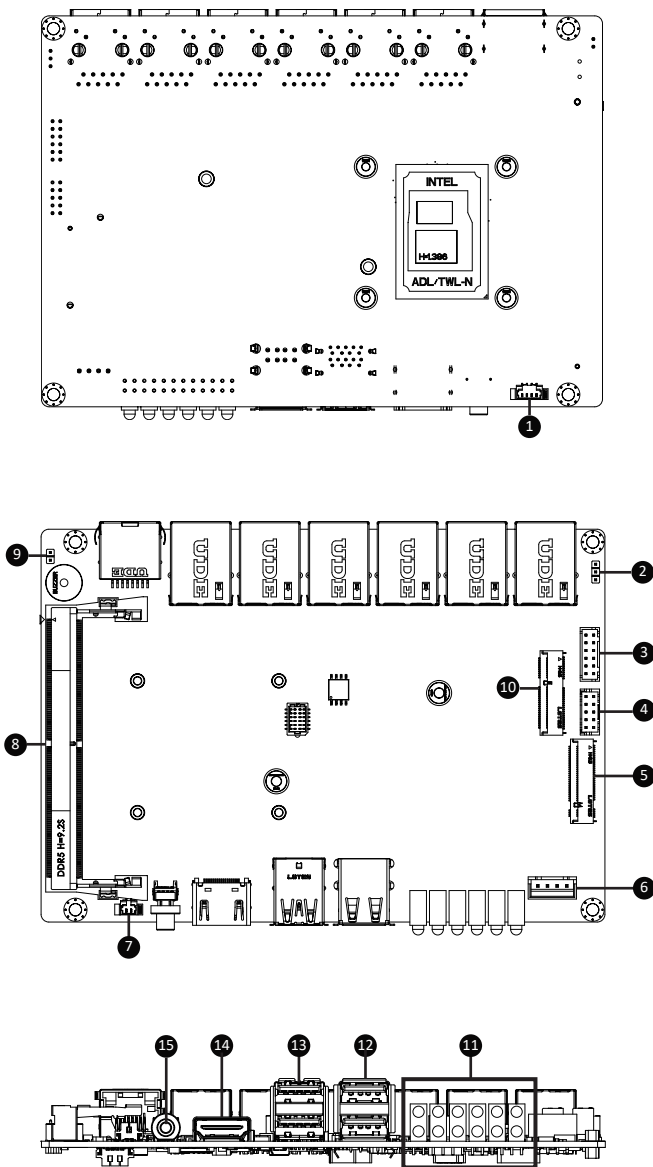

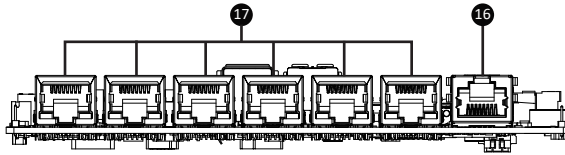


No	Code	Description
1	FAN	FAN connector
2	AT_CN	AT/ATX mode select jumper
3	GPIO_CNT	General Purpose input/output header
4	COM2	Serial port header (RS-232)
5	M2M	M.2 slot, 2280 M-key
6	DC_IN	DC IN 1x4pin power connector
7	BATTERY	Battery cable connector
8	SODIMMA	DDR5 SO-DIMM socket
9	ME	ME Disable jumper
10	M2E	M.2 slot, 2230 E-key
11	LAN1_LED LAN2_LED LAN3_LED LAN4_LED LAN5_LED LAN6_LED	LAN LEDs
12	USB20	USB 2.0 port x 2


No	Code	Description
13	USB32	USB 3.2 Gen 2x2 port x 2
14	HDMI	HDMI connector
15	PWR_ BUTTON	Power button
16	RJ45_COM1	Serial Port (RS-232)(RJ45 type)
17	LAN1, LAN2, LAN3, LAN4, LAN5, LAN6	LAN Connector x 6

3.2.1 FAN (FAN connector)

1

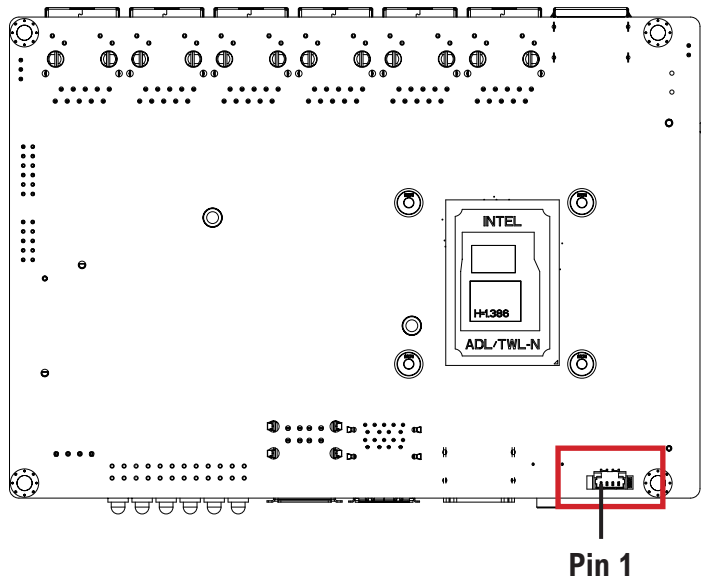

CPU/System FAN

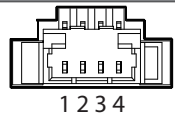

Connector PN	Vendor
85205-0470N	ACES
A1250WV-S-04PC	JOINT-TECH


Connector type

1x4pin header, pitch 1.25mm

Pin No.	Definition
1	GND
2	12V
3	Detect
4	Speed Control

3.2.2 AT_CN (AT/ATX mode select jumper)

2

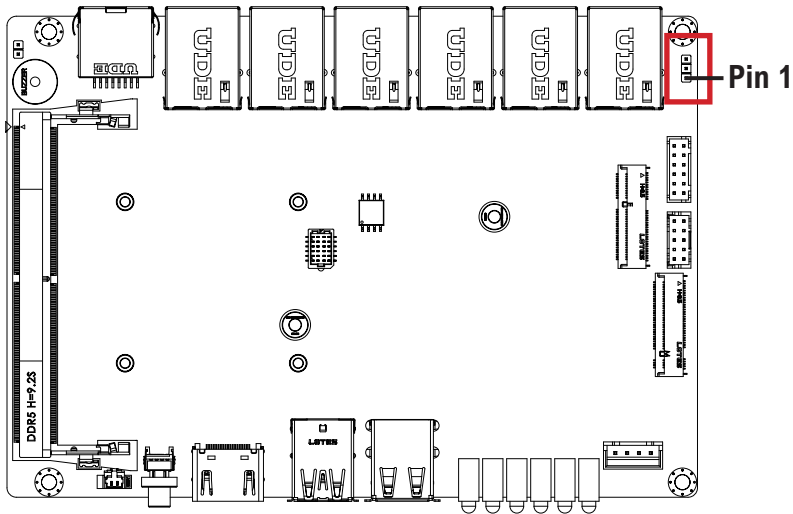


AT/ATX mode select jumper	
	1-2 Close : AT mode.
	2-3 Close : ATX mode. (Default setting)

Pin No.	Definition
1	AT MODE
2	Detect
3	ATX MODE

Connector PN	Vendor
220-96-03GB01	PINREX
220-96-03GB001K	PINREX
Connector type	
1x3pin header, pitch 2.0mm	

3.2.3 GPIO_CNT (General Purpose input/output header)

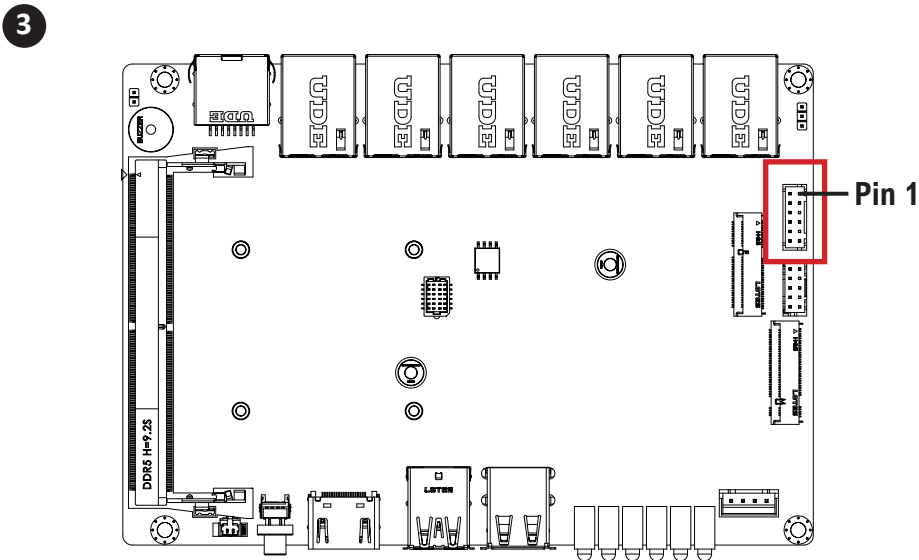

GPIO Connector	
Pin No.	Definition
1	GPIO-output_1
2	GPIO-input_1
3	GPIO-output_2
4	GPIO-input_2
5	GPIO-output_3
6	GPIO-input_3
7	GPIO-output_4
8	GPIO-input_4
9	SMBus Clock
10	SMBus DATA


Pin No.	Definition
11	5V
12	GND

Connector PN	Vendor
725-81-12TW00	PINREX

Connector type
2x6pin header, pitch 2.0mm

3.2.4 COM2 (Serial port header)

4

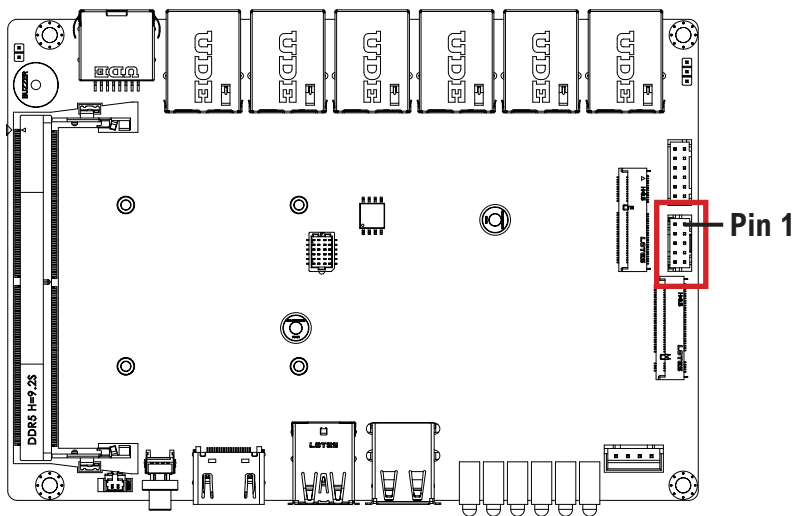

Serial Port Cable Connector

2 1

10 9


Pin No.	Definition
1	RXD
2	DCD
3	DTR
4	TXD
5	DSR
6	GND
7	CTS
8	RTS
9	No Connect
10	RI

Connector PN	Vendor
725-81-10TW00	PINREX


Connector type
2x5pin header, pitch 2.0mm

3.2.5 M2M (M.2 Slot, 2280 M-Key)

5

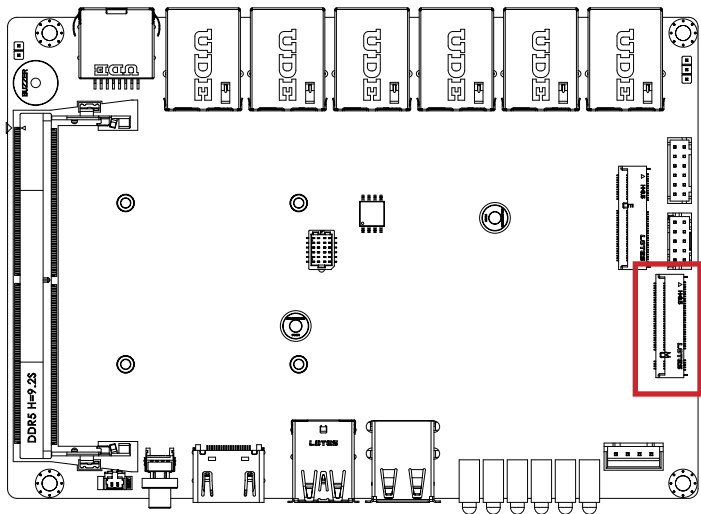

M.2 M Key Connector



Pin No.	Definition	Pin No.	Definition
1	GND	2	3.3V
3	GND	4	3.3V
5	NC	6	NC
7	NC	8	NC
9	GND	10	SSD LED
11	NC	12	3.3V
13	NC	14	3.3V
15	GND	16	3.3V
17	NC	18	3.3V
19	NC	20	NC
21	GND	22	NC
23	NC	24	NC
25	NC	26	NC
27	GND	28	NC
29	PCIe1 RXn	30	NC
31	PCIe1 RXp	32	NC
33	GND	34	NC


Pin No.	Definition	Pin No.	Definition
35	PCIe1 TXn	36	NC
37	PCIe1 TXp	38	devslp
39	GND	40	NC
41	PCIe0 RXn	42	NC
43	PCIe0 RXp	44	NC
45	GND	46	NC
47	PCIe0 TXn	48	NC
49	PCIe0 TXp	50	PCI Reset
51	GND	52	PCIe Clock Request
53	PCIe Clock n	54	NC
55	PCIe Clock p	56	NC
57	GND	58	NC

Pin No.	Definition	Pin No.	Definition
67	NC	68	NC
69	Detect	70	3.3V
71	GND	72	3.3V
73	GND	74	3.3V
75	GND		

Connector PN	Vendor
80159-8521	BELLWETHER

3.2.6 DC_IN (DC IN 1x4pin power connector)

6

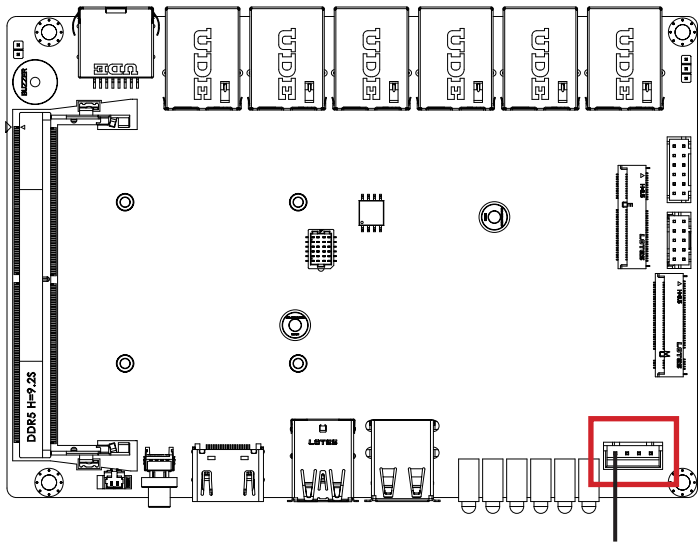


Pin 1

DC in Connector	
DC_IN	
1	4

Connector PN	Vendor
753-81-04TW00	PINREX
Connector type	
1x4pin header, pitch 2.5mm	

Pin No.	Definition
1	GND
2	DC in
3	DC in
4	GND

3.2.7 BATTERY (Battery cable connector)

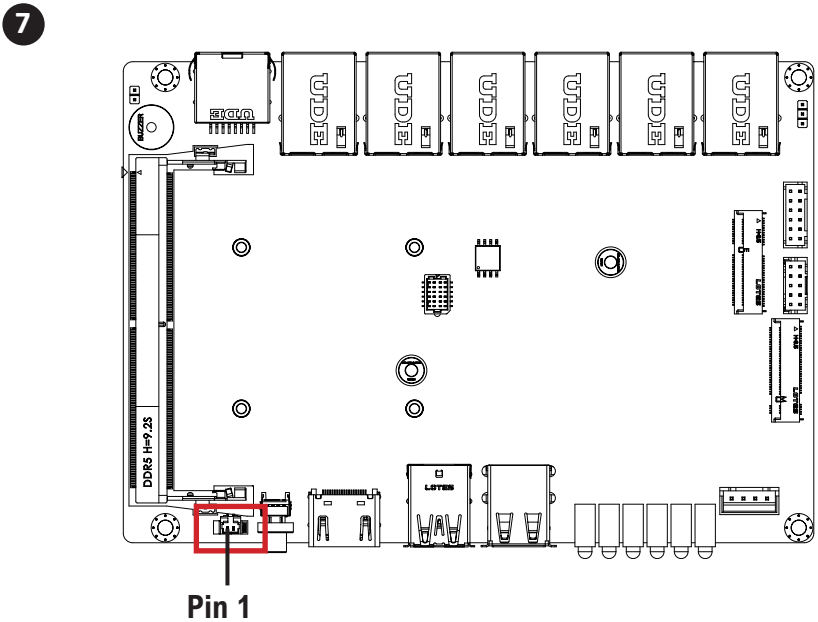

Battery Cable Connector


1 2

Pin No.	Definition
1	3V
2	GND

Connector PN	Vendor
85205-0270L	ACES
A1250WV-S-02PC	JOINT-TECH
Connector type	
1x2pin header, pitch 1.25mm	


3.2.8 SODIMMA (DDR5 SO-DIMM socket)

8

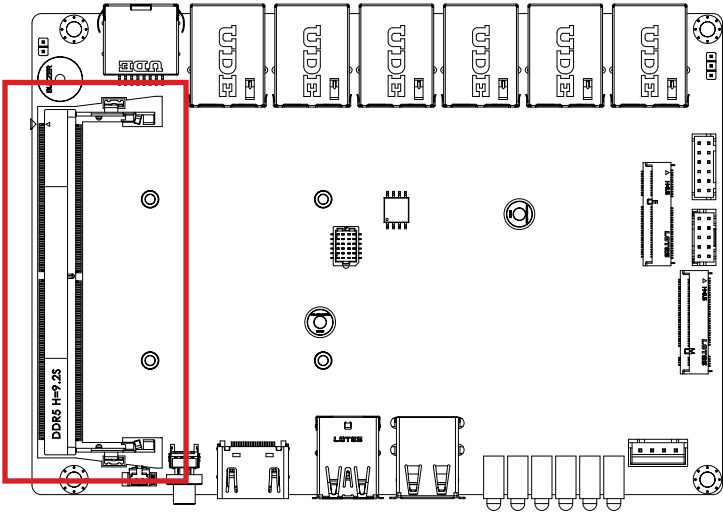

3.2.9 ME (ME Disable jumper)

9

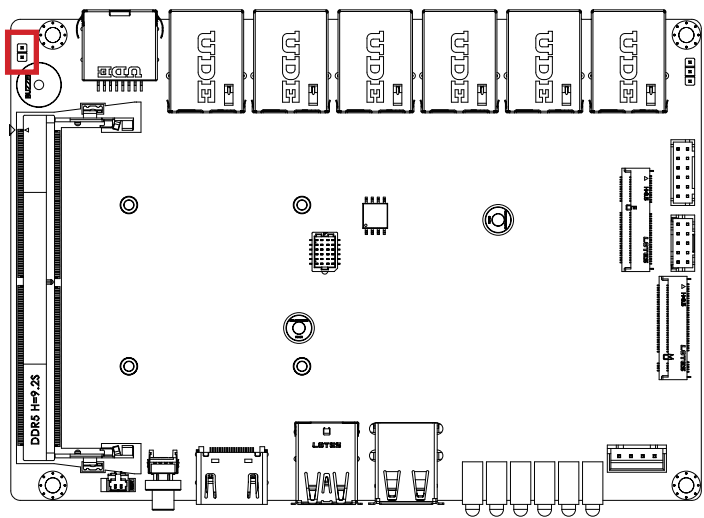

ME Disable Connector


Connector PN	Vendor
220-96-02GBK1	PINREX

Connector type
1x2pin header, pitch 2.0mm


ME Disable jumper	
	Enable (Default setting)
	Disable

3.2.10 M2E (M.2 slot, 2230 E-key)

10

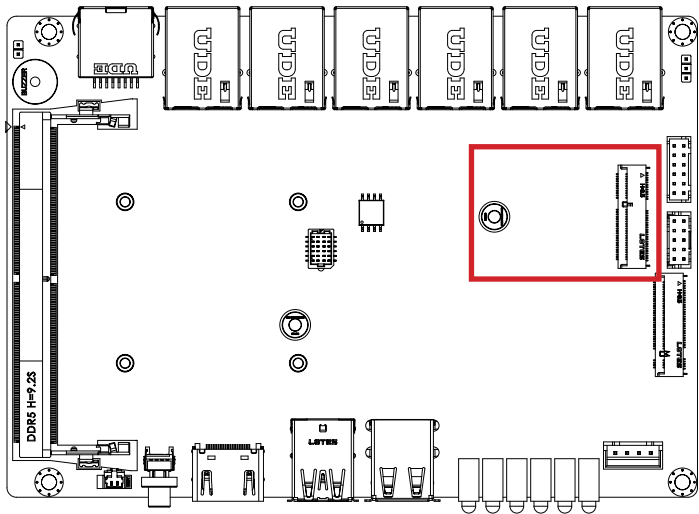

M.2 E Key Connector



Pin No.	Definition	Pin No.	Definition
1	GND	2	3V
3	USB_Dp	4	3V
5	USB_Dn	6	NC
7	GND	8	NC
9	NC	10	NC
11	NC	12	NC
13	GND	14	NC
15	NC	16	NC
17	NC	18	GND
19	GND	20	NC
21	NC	22	NC
23	NC		


Pin No.	Definition	Pin No.	Definition
33	GND	32	NC
35	PCIe1 TXp	34	NC
37	PCIe1 TXn	36	NC

39	GND	38	NC
41	PCIe1 RXp	40	NC
43	PCIe1 RXn	42	NC
45	GND	44	NC
47	CLK_Dp	46	NC
49	CLK_Dn	48	NC
51	GND	50	NC
53	CLK_REQ	52	PCIe_RST
55	PCIe_WAKE	54	BT_Disable
57	GND	56	WLAN_DISABLE
59	NC	58	NC
61	NC	60	NC
63	GND	62	NC
65	NC	64	NC
67	NC	66	NC
69	GND	68	NC
71	NC	70	NC
73	NC	72	3V
75	GND	74	3V

Connector PN	Vendor
APCI0095-P002A	LOTES
80152-8521	BELLWETHER
2E0BC21-S85BE-LH	FOXCONN

3.2.11 LAN1_LED, LAN2_LED, LAN3_LED, LAN4_LED
LAN5_LED, LAN6_LED (LAN LEDs)

11

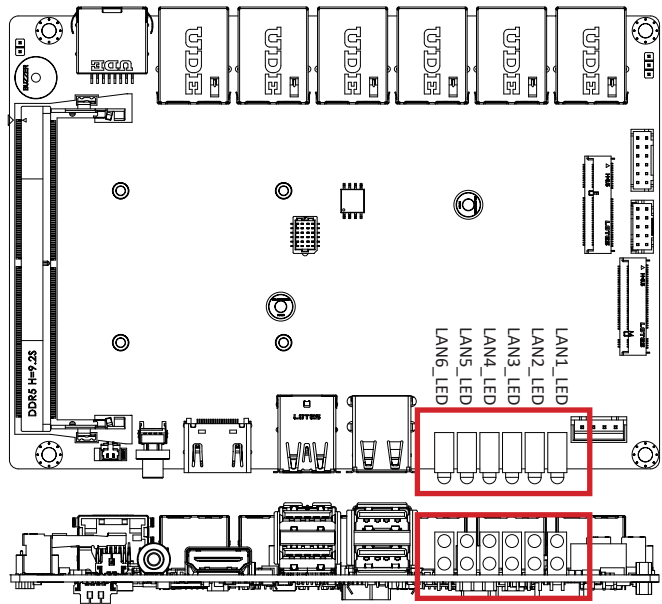


LAN LEDs Connector	
	Active Speed


Connector PN	Vendor
PA2/439682/ YYG2/2/20/HA	ETERNAL-SHINE

State	Description
Yellow On	2.5Gbps data rate
Green On	1Gbps data rate
Off	100M & 10Mbps data rate

3.2.12 USB20 (USB 2.0 port x 2)

12

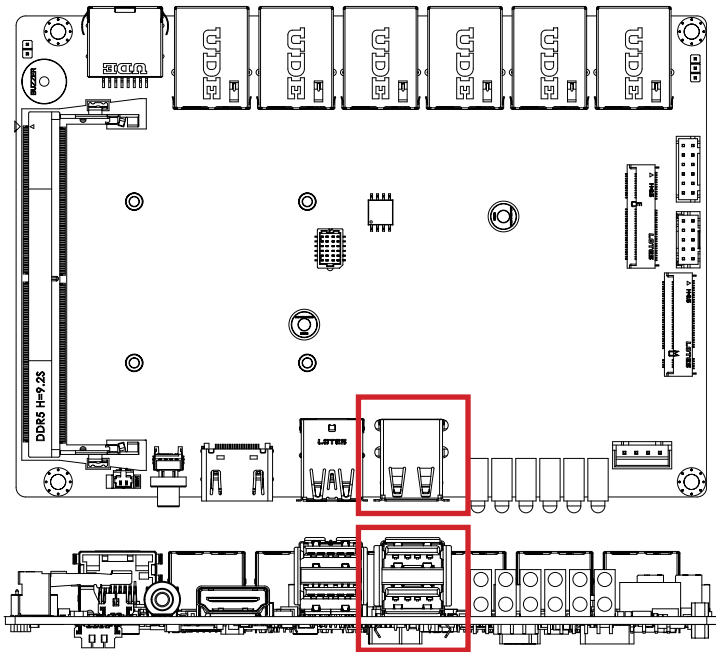


USB Connector	
	

Pin No.	Definition
1	5V
2	D1n
3	D1p
4	GND
5	5V
6	D2n
7	D2p
8	GND


Connector PN	Vendor
UB1112C-8FDE-4F	FOXCONN

3.2.13 USB32 (USB 3.2 Gen 2x2 port x 2)

13

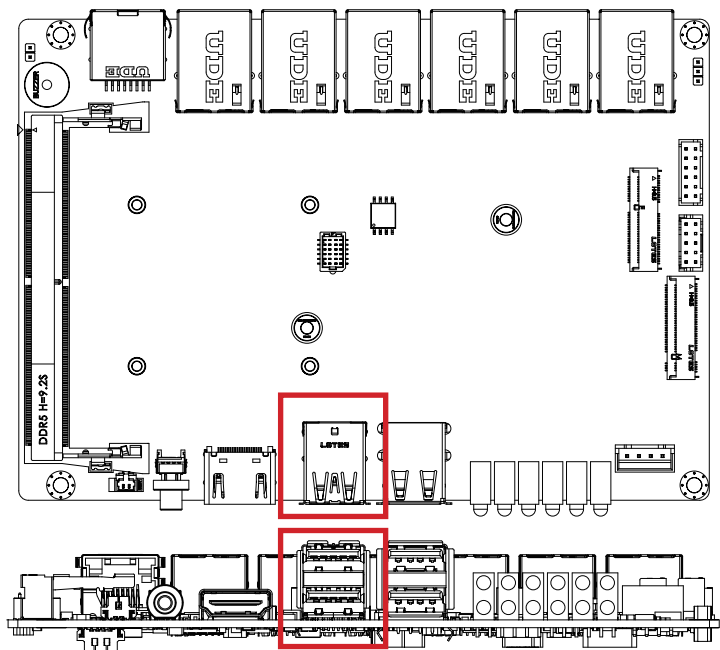

USB Connector



Connector PN

18-A5950-6A33-A


Vendor


TCONN

Pin No.	Definition	Pin No.	Definition
1	5V	10	5V
2	USB_Dn	11	USB_Dn
3	USB_Dp	12	USB_Dp
4	GND	13	GND
5	USB3_RXn	14	USB3_RXn
6	USB3_RXp	15	USB3_RXp
7	GND	16	GND
8	USB3_TXn	17	USB3_TXn
9	USB3_TXp	18	USB3_TXp

3.2.14 HDMI (HDMI connector)

14

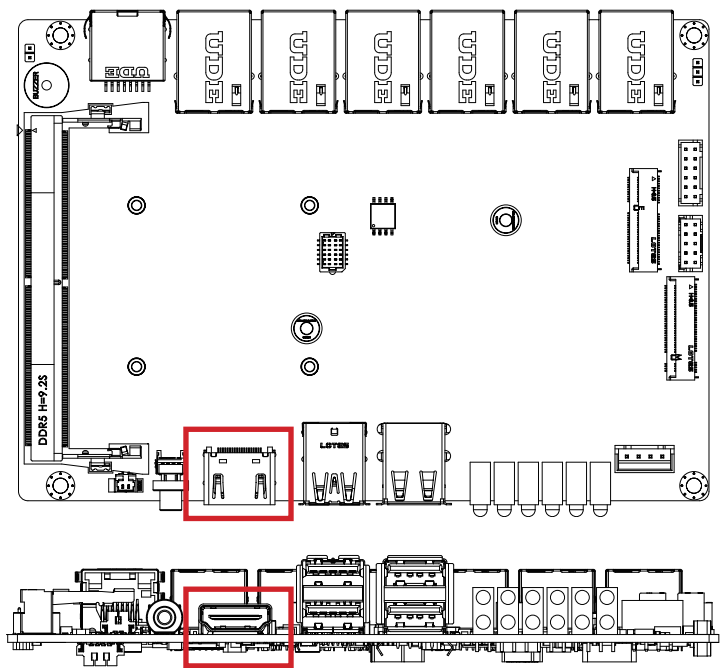


HDMI Connector			
			
Pin No.	Definition	Pin No.	Definition
1	TX2p	20	TX2p
2	GND	21	GND
3	TX2n	22	TX2n
4	TX1p	23	TX1p
5	GND	24	GND
6	TX1n	25	TX1n
7	TX0p	26	TX0p
8	GND	27	GND
9	TX0n	28	TX0n
10	CLKp	29	CLKp

Pin No.	Definition	Pin No.	Definition
11	GND	30	GND
12	CLKn	31	CLKn
13	NC	32	NC
14	NA	33	NA
15	DDC Clock	34	DDC Clock
16	DDC Data	35	DDC Data
17	GND	36	GND
18	5V	37	5V
19	Hot Plug Detect	38	Hot Plug Detect

Connector PN	Vendor
D13-0715-19681	WALTA


3.2.15 PWR_BUTTON (Power button)

15

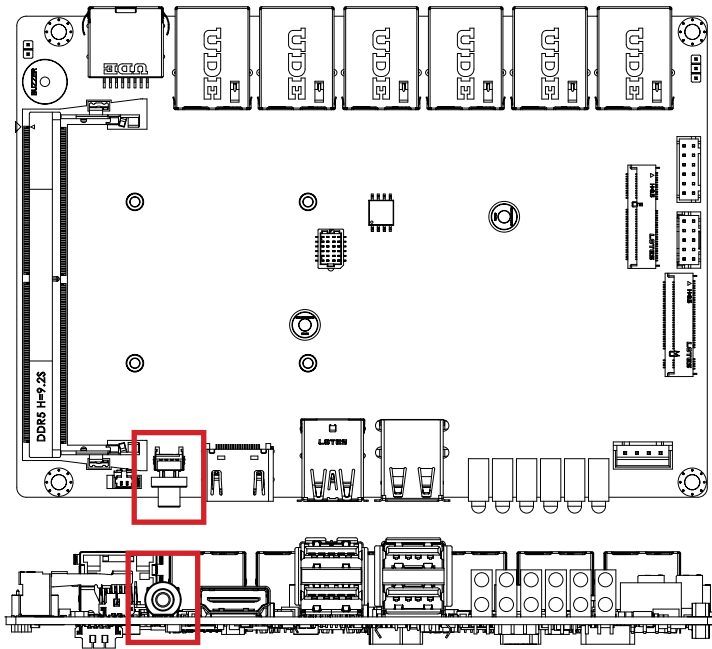

3.2.16 RJ45_COM1 (Serial Port (RS-232)(RJ45 type))

16

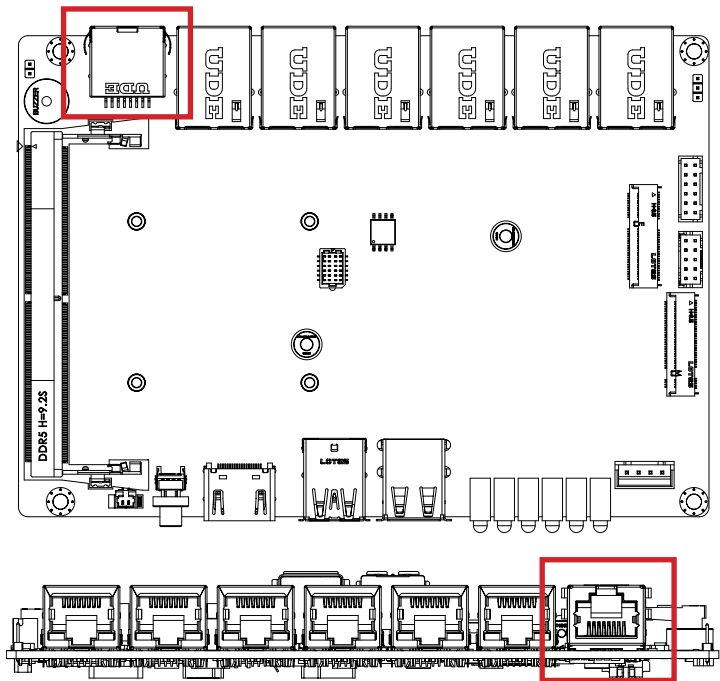


RJ45-COM connector

Pin No.	Definition
1	DSR
2	RTS
3	GND
4	TXD
5	RXD
6	DCD
7	CTS
8	DTR


Connector PN	Vendor
C13-10000002	UDE

3.2.17 LAN1, LAN2, LAN3, LAN4, LAN5, LAN6 (LAN connector x 6)

17

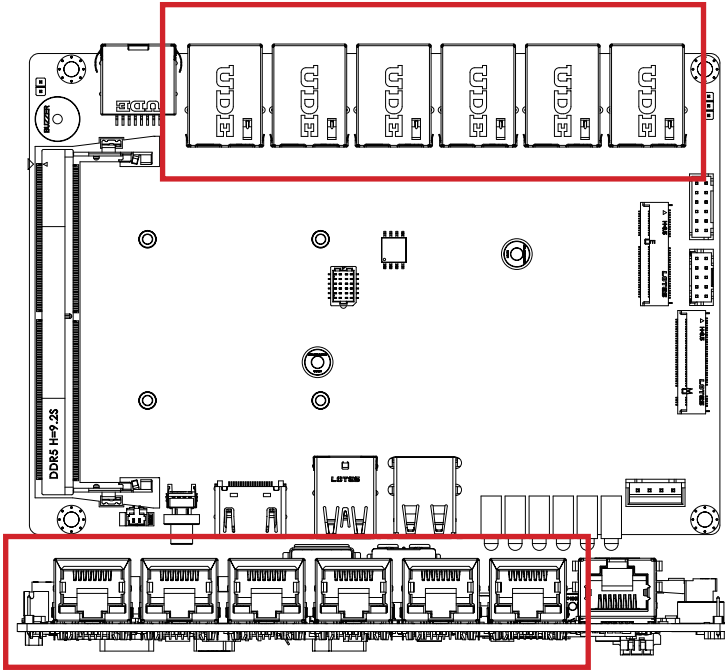

LAN connector



Pin No.	Definition
1	TX1+
2	TX1-
3	TX2+
4	TX2-
5	TX3+
6	TX3-
7	TX4+
8	TX4-

Connector PN	Vendor
RB1-GB-0010	UDE
State	Description
Yellow On	2.5Gbps data rate
Green On	1Gbps data rate
Off	100M & 10Mbps data rate

Chapter 4

Chapter 4 – BIOS

4.1 Introduction

BIOS (Basic input/output system) provides hardware detailed information and boot-up options, which include firmware to control, set-up and test all hardware settings. Therefore, BIOS is the communication bridge between OS/application software and hardware.

4.1.1 How to Entering into BIOS menu


Once the system is power on, press the key as soon as possible to access into BIOS Setup program.

4.1.2 Function Keys to setup in BIOS Setup program

Function keys	Description
→←	Select Screen
↑↓	Select Item
Enter	Execute command or enter the submenu
+	Increase the numeric value or make changes
—	Decrease the numeric value or make changes
F1	General Help
F2	Previous Values
F3	Load Optimized Defaults Settings
F4	Save changes & Exit the BIOS Setup program
ESC	Exit the BIOS Setup program

4.2 The Main Menu


The main menu shows the basic system information.
Use arrow keys to move among the items.

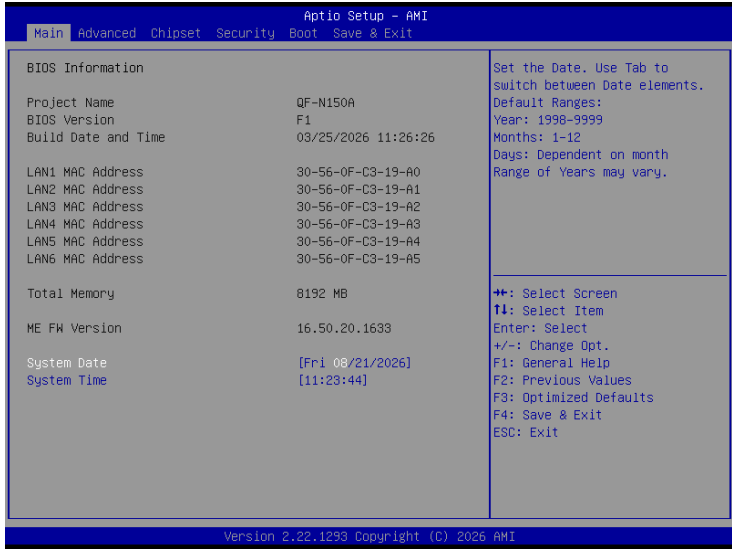

Items	Description
Project Name	Shows Project name information
BIOS Version	Shows the BIOS version of the system
Build Date and Time	Shows the Build Date and Time when the BIOS was created
LAN1 MAC Address	Shows LAN1 MAC Address information
LAN2 MAC Address	Shows LAN2 MAC Address information
LAN3 MAC Address	Shows LAN3 MAC Address information
LAN4 MAC Address	Shows LAN4 MAC Address information
LAN5 MAC Address	Shows LAN5 MAC Address information
LAN6 MAC Address	Shows LAN6 MAC Address information
Total Memory	Shows the total memory size of the installed memory
ME FW version	Shows ME firmware version
System Date	Set the Date for the system (Format : Week - Month - Day - Year)
System Time	Set the time for the system (Format : Hour - Minute - Second)


4.3 Advanced

The Advanced menu is to configure the functions of hardware settings through submenu. Use arrow keys to move among the items, and press <Enter> to access into the related submenu.

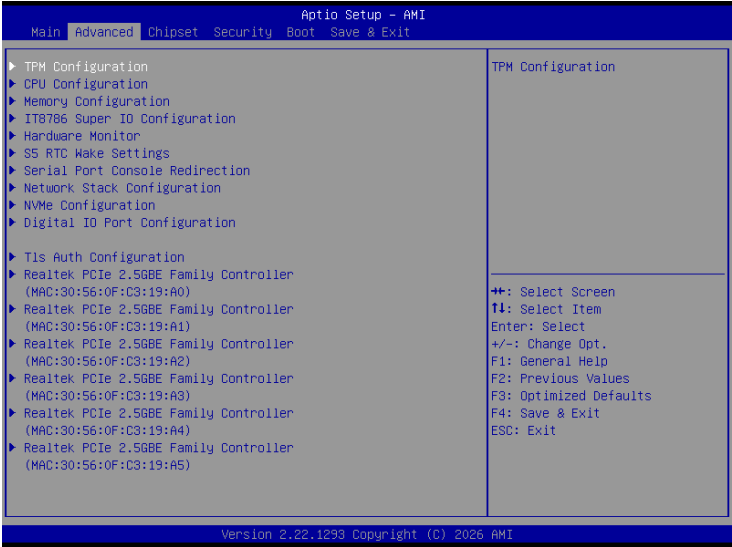


4.3.1 TPM Configuration

Use TPM Configuration submenu to choose TPM interface.

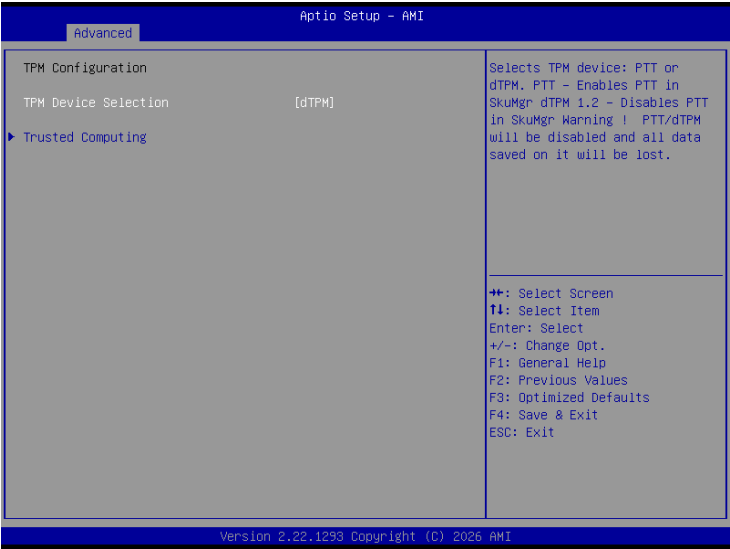

Item	Description
TPM Device Selection	PTT : Internal TPM dTPM : External TPM (When using External TPM module or having TPM chip on MB)(Default setting)


Trusted Computing : Shows TPM information, and TPM module configuration setting.

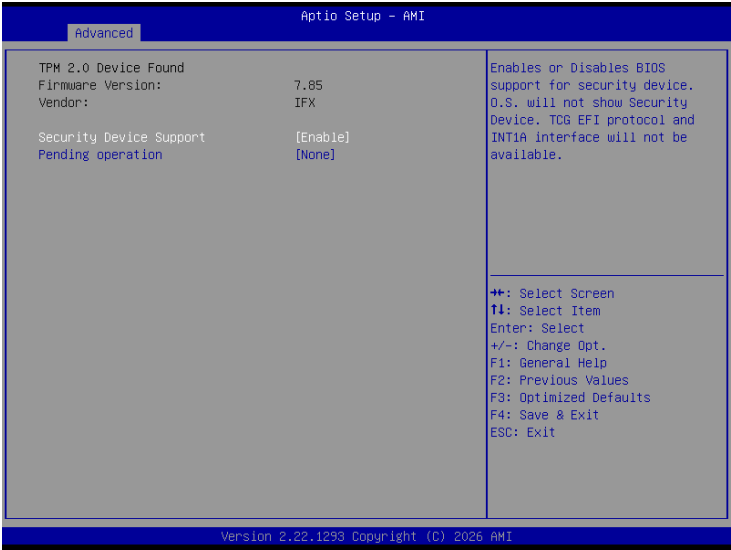

Item	Description
Security Device support	Enabled : Enables TPM feature (Default setting) Disabled : Disables TPM feature
Pending operation	None : No execution will be conducted (Default setting) TPM clear : Set to clear data on TPM

4.3.2 CPU Configuration

This submenu shows detailed CPU informations.

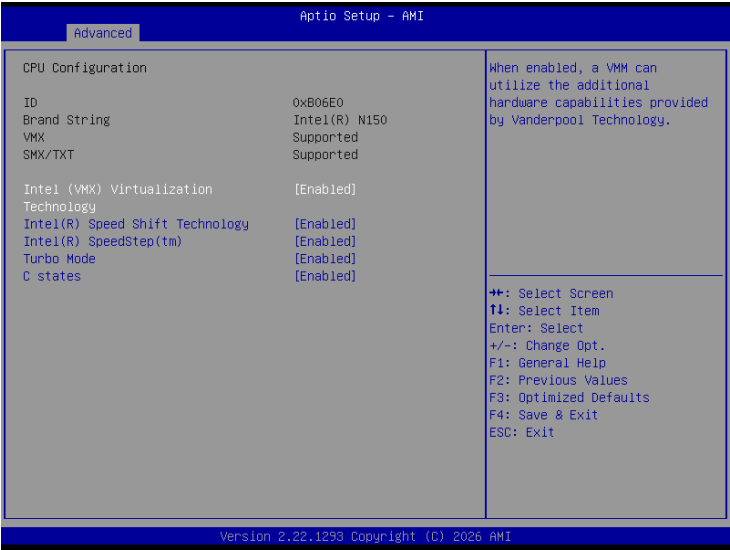


Item	Description
Intel (VMX) Virtualization Technology	Virtualization enhanced by Intel® Virtualization Technology will allow a platform to run multiple operating systems and applications in independent partitions. With virtualization, one computer system can function as multiple virtual systems. Enabled : Enables Intel Virtualization Technology (Default setting) Disabled : Disables Intel Virtualization Technology
Intel(R) Speed Shift Technology	To speed up CPU frequency transition time from basic frequency to maximum frequency. Enabled : Enables Intel(R) Speed Shift Technology (Default setting) Disabled : Disables Intel(R) Speed Shift Technology
Intel(R) SpeedStep(tm)	According to Intel CPU loading, Intel SpeedStep Technology will automatically adjust the CPU voltage and core frequency to decrease heat and power consumption for power saving. Enabled : Enables Intel(R) SpeedStep Technology (Default setting) Disabled : Disables Intel(R) SpeedStep Technology
Turbo Mode	Enabled : Enables Turbo Mode (Default setting) Disabled : Disables Turbo Mode
C states	Command CPU to enter into low power consumption mode when CPU is under idle mode. Enabled : Enables C states (Default setting) Disabled : Disables C states

4.3.3 Memory Configuration




Item	Description
In-Band ECC Support	Enable or Disable In-Band ECC Support function. Disabled : Disables In-Band ECC Support. (Default setting) Enabled : Enables In-Band ECC Support.

4.3.4 IT8786 Super IO Configuration

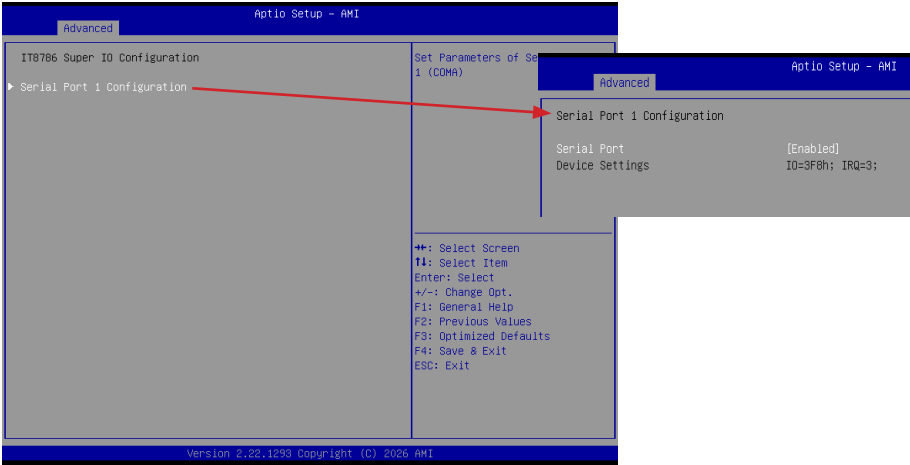

Item	Description
Serial Port 1 Configuration	Press [Enter] to configure advanced items : Serial Port : Enabled : Enables allows you to configure the serial port settings Disabled : if Disabled, displays no configuration for the serial port Device settings : Display the specified Serial Port base I/O address and IRQ

4.3.5 Hardware Monitor

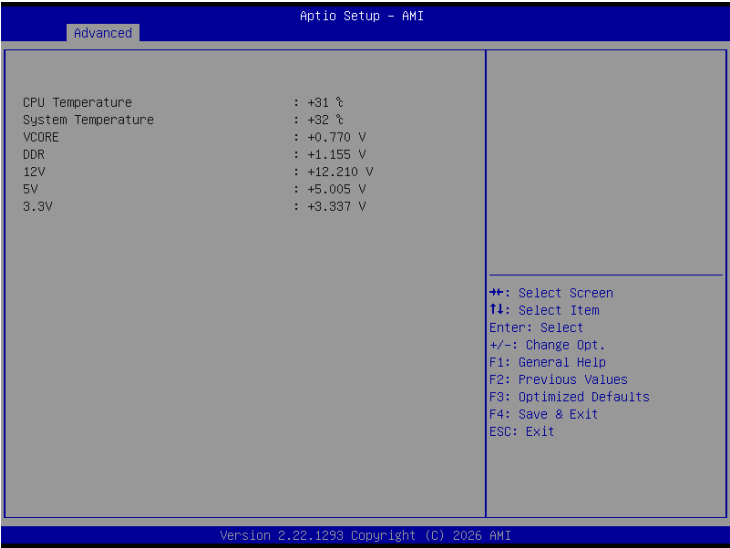


Item	Description
CPU Temperature	Shows current CPU temperature
System Temperature	Shows current system temperature

4.3.6 S5 RTC Wake Settings




Item	Description
Wake system from S5	Enable or Disable System to wake on a specific time. Disabled : Disables system to wake on a specific time (Default setting) Fixed Time : Enables system to wake on a specific time (Format : hr : min : sec)

4.3.7 Serial Port Console Redirection - COM1


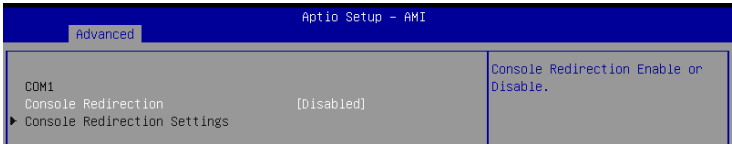


When Console Redirection is enabled :

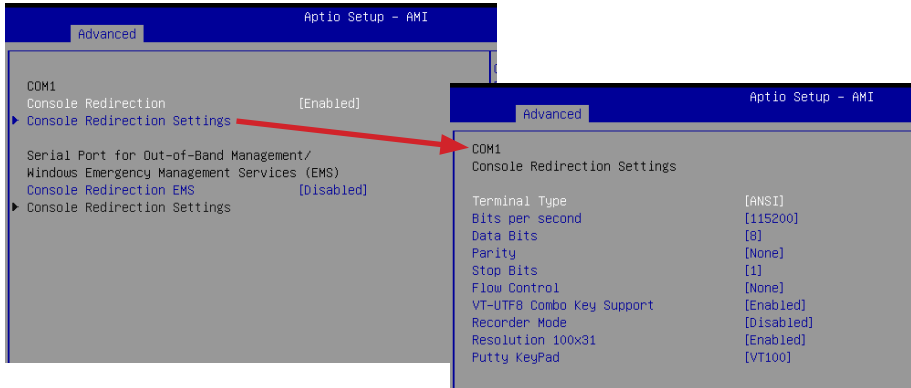


Item	Description
Console Redirection Settings	When Console Redirection is enabled :
	COM1 Console Redirection Settings Terminal Type : VT100, VT100Plus, VT-UTF8, ANSI (Default setting) Bits per second : 9600, 19200, 38400, 57600, 115200 (Default setting) Data Bits : 7 , 8 (Default setting) Parity : None (Default setting), Even, Odd, Mark, Space Stop Bits : 1 (Default setting), 2 Flow Control : None (Default setting), Hardware RTS/CTS VT-UTF8 Combo Key Support : Disabled, Enabled (Default setting) Recorder Mode : Disabled (Default setting), Enabled Resolution 100x31 : Disabled, Enabled (Default setting) Putty KeyPad : VT100 (Default setting), LINUX, XTERMR6, SCO, ESCN, VT400

4.3.7 Serial Port Console Redirection - Serial Port for Out-of-Band Management/ Windows Emergency Management Services (EMS)

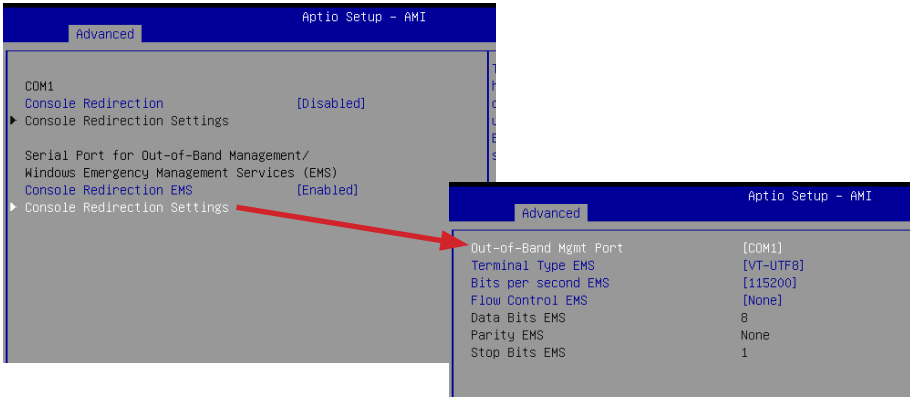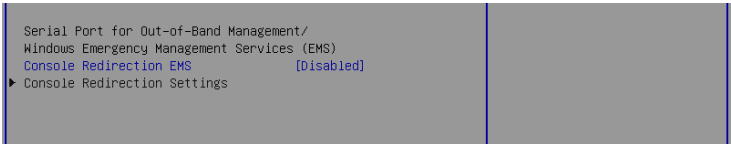


Item	Description
Console Redirection Settings	When Console Redirection EMS is enabled : Serial Port for Out-of-Band Management/ Windows Emergency Management Services (EMS) Console Redirection Settings Out-of-Band Mgmt Port : COM1 (Default setting), COM2 Terminal Type EMS : VT100, VT100Plus, VT-UTF8 (Default setting), ANSI Bits per second : 9600, 19200, 38400, 57600, 115200 (Default setting) Flow Control EMS : None (Default setting), Hardware RTS/CTS, Software Xon/Xoff

4.3.8 Network Stack Configuration

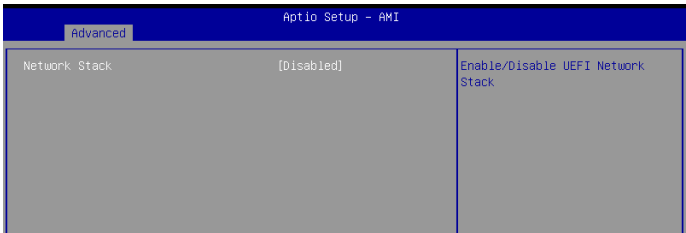

When Network stack is enabled :

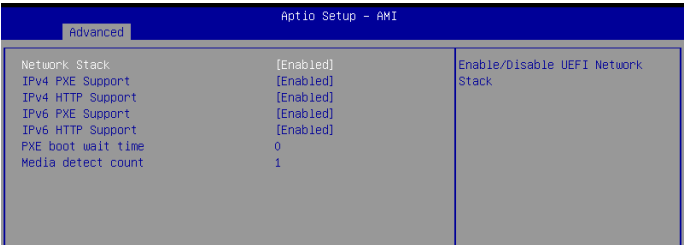


Item	Description
Network Stack	When system is power on, install LAN driver under UEFI mode Disabled : Disables UEFI Network Stack (Default setting) Enabled : Enables UEFI Network Stack
IPv4 PXE Support	When Network stack is enabled : Disabled : Disables IPv4 PXE Support Enabled : Enables IPv4 PXE Support
IPv4 HTTP Support	When Network stack is enabled : Disabled : Disables IPv4 HTTP Support Enabled : Enables IPv4 HTTP Support
IPv6 PXE Support	When Network stack is enabled : Disabled : Disables IPv6 PXE Support Enabled : Enables IPv6 PXE Support
IPv6 HTTP Support	When Network stack is enabled : Disabled : Disables IPv6 HTTP Support Enabled : Enables IPv6 HTTP Support
PXE boot wait time	Wait time in seconds, or use ESC key to abort the PXE boot.
Media detect count	Number of times the presence of media will be checked.

4.3.9 NVMe Configuration

NVMe Configuration shows information when your M.2 NVMe PCIe SSD is installed.




4.3.10 Digital IO Port Configuration

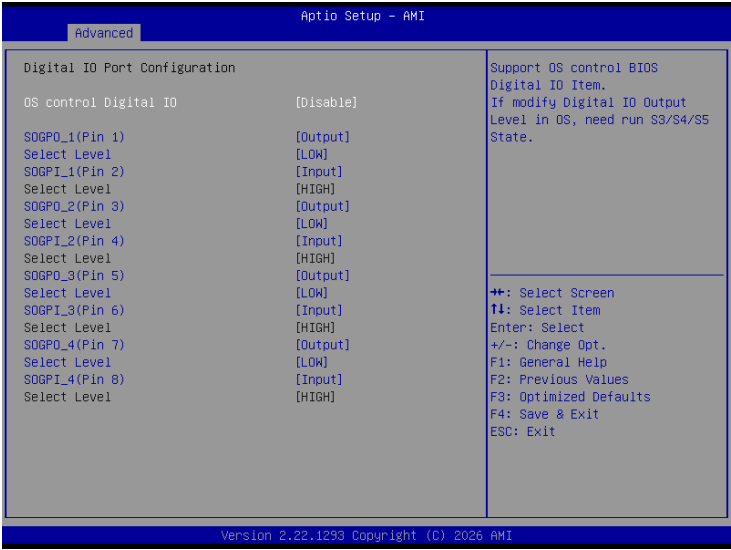

Item	Description
OS control Digital IO	Disabled : If Digital IO Output value/level is modified in OS, they will not be memorized and kept. (Default setting) Enabled : If Digital IO Output value/level is modified in OS, they will be memorized and kept.
SOGPO_1 (Pin 1) SOGPI_1 (Pin 2) SOGPO_2 (Pin 3) SOGPI_2 (Pin 4) SOGPO_3 (Pin 5) SOGPI_3 (Pin 6) SOGPO_4 (Pin 7) SOGPI_4 (Pin 8)	Configure Digital IO Input or Output values for each pin.


4.3.11 Tls Auth Configuration

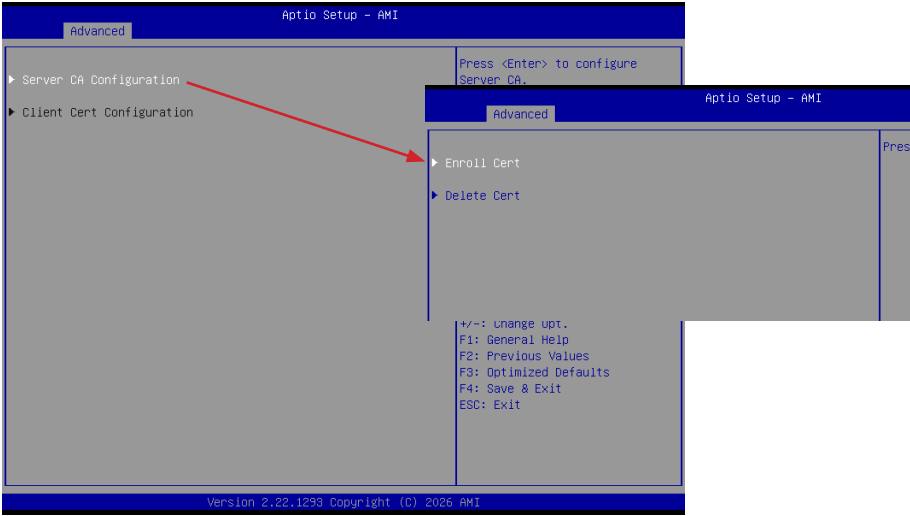

Item	Description
Enroll Cert	Press [Enter] to configure advanced items : Server CA Configuration : Enroll Cert : 1. Enroll Cert Using File 2. Cert GUID : Input digit character in 11111111-2222-3333-4444-1234567 890ab format. 3. Commit Changes and Exit 4. Discard Changes and Exit

4.3.12 Realtek PCIe 2.5GBE Family Controller (MAC: 30:56:0F:C3:19:A0) (MAC address may varied based on different motherboard)


Shows Intel Ethernet controller information

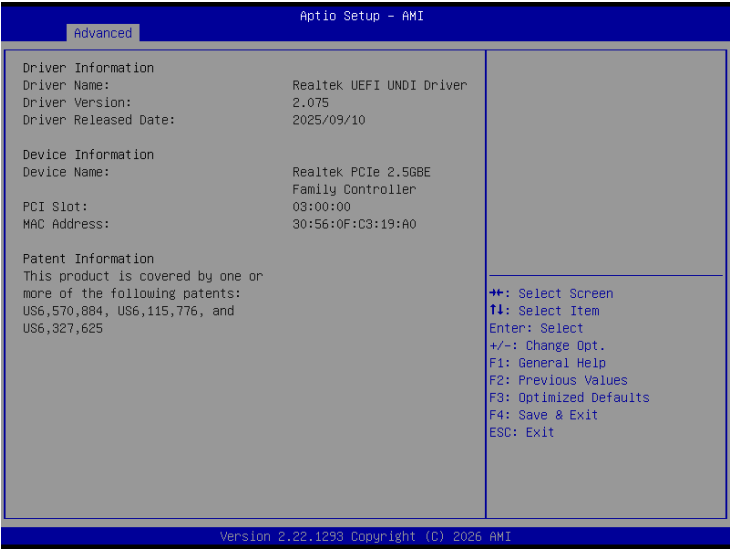

NOTE : MAC address may varied based on different motherboard

4.3.13 Realtek PCIe 2.5GBE Family Controller (MAC: 30:56:0F:C3:19:A1) (MAC address may varied based on different motherboard)


Shows Intel Ethernet controller information

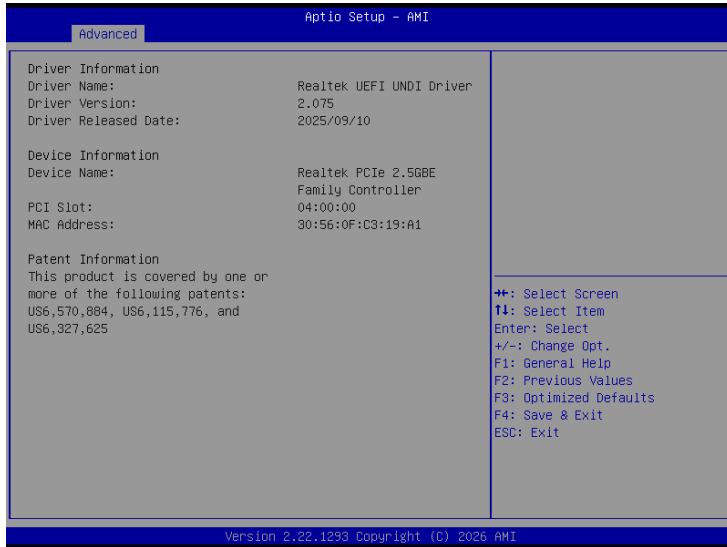

NOTE : MAC address may varied based on different motherboard

4.3.14 Realtek PCIe 2.5GBE Family Controller (MAC: 30:56:0F:C3:19:A2)
(MAC address may varied based on different motherboard)


Shows Intel Ethernet controller information

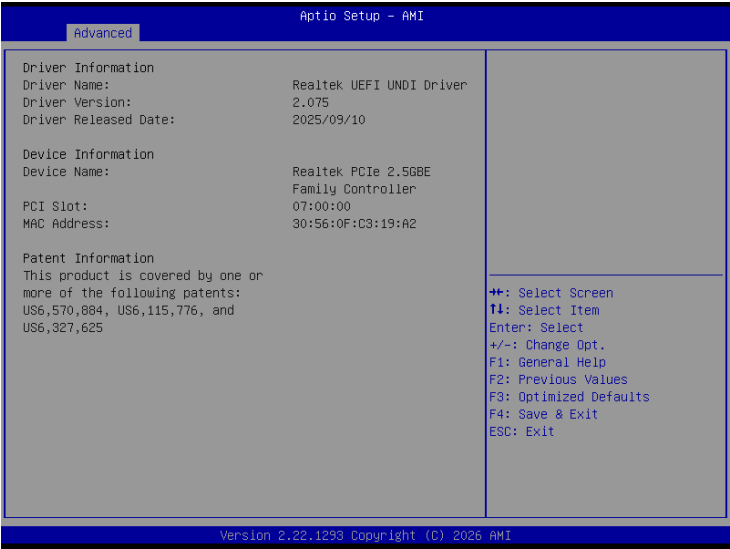

NOTE : MAC address may varied based on different motherboard

4.3.15 Realtek PCIe 2.5GBE Family Controller (MAC: 30:56:0F:C3:19:A3) (MAC address may varied based on different motherboard)


Shows Intel Ethernet controller information

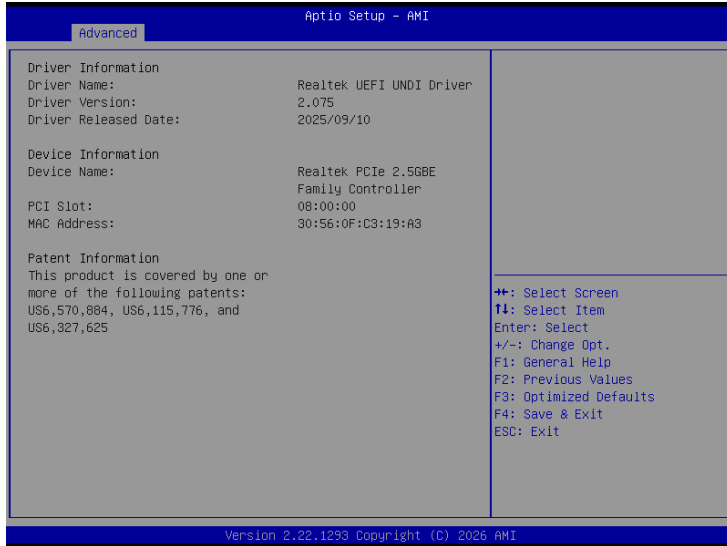

NOTE : MAC address may varied based on different motherboard

4.3.16 Realtek PCIe 2.5GBE Family Controller (MAC: 30:56:0F:C3:19:A4) (MAC address may varied based on different motherboard)


Shows Intel Ethernet controller information

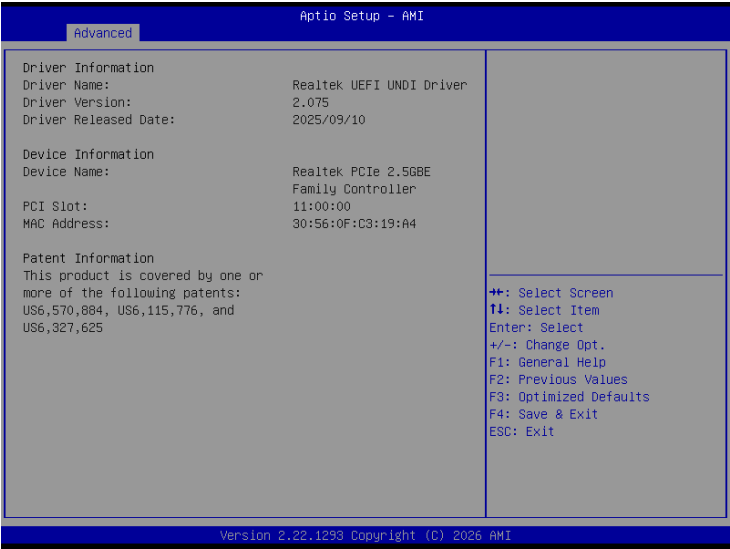

NOTE : MAC address may varied based on different motherboard


4.3.17 Realtek PCIe 2.5GBE Family Controller (MAC: 30:56:0F:C3:19:A5) (MAC address may varied based on different motherboard)

Shows Intel Ethernet controller information

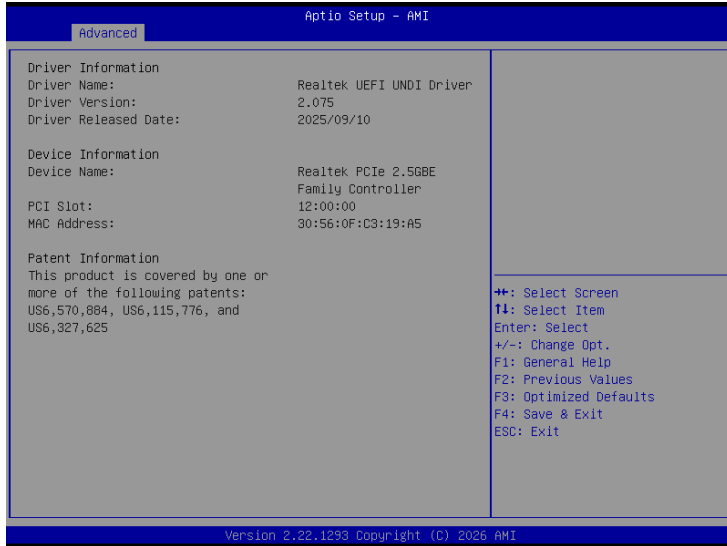


NOTE : MAC address may varied based on different motherboard

4.4 Chipset

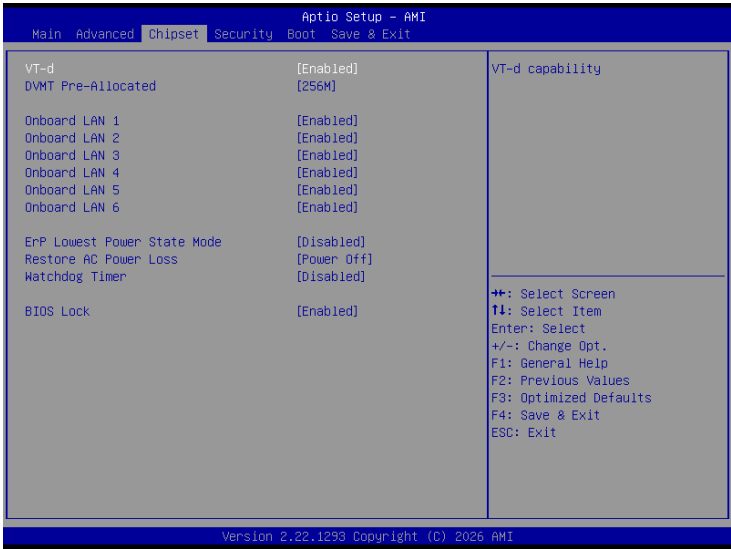

Item	Description
VT-d	Enabled : Enables VT-d function (Default setting) Disabled : Disables VT-d function
DVMT Pre-Allocated	Use DVMT Pre-Allocated to set the amount of system memory which is installed to the integrated graphics processor Option items : 32M , 64M, 128M , 256M(Default setting)
Onboard LAN 1 Onboard LAN 2 Onboard LAN 3 Onboard LAN 4 Onboard LAN 5 Onboard LAN 6	Enable/Disable onboard LAN controller Enabled : Enables onboard LAN controller (Default setting) Disabled : Disables onboard LAN controller
ErP Lowest Power State Mode	Enable/Disable Enables ErP Lowest Power State Mode Enabled : Enables ErP Lowest Power State Mode Disabled : Disables ErP Lowest Power State Mode (Default setting)
Restore AC Power Loss	To set which option the system should returns if a sudden power loss occurred Power off : Do not power on when the power is back (Default setting) Power on : System power on when the power is back Last state : Restore the system to the state before power loss occurs
Watchdog Timer	Enable/Disable Watchdog Timer function Enabled : Enables Watchdog Timer function Disabled : Disabled Watchdog Timer function (Default setting)
BIOS Lock	Enable/Disable BIOS Lock function Enabled : Enables BIOS Lock function (Default setting) Disabled : Disabled BIOS Lock funtion


4.5 Security

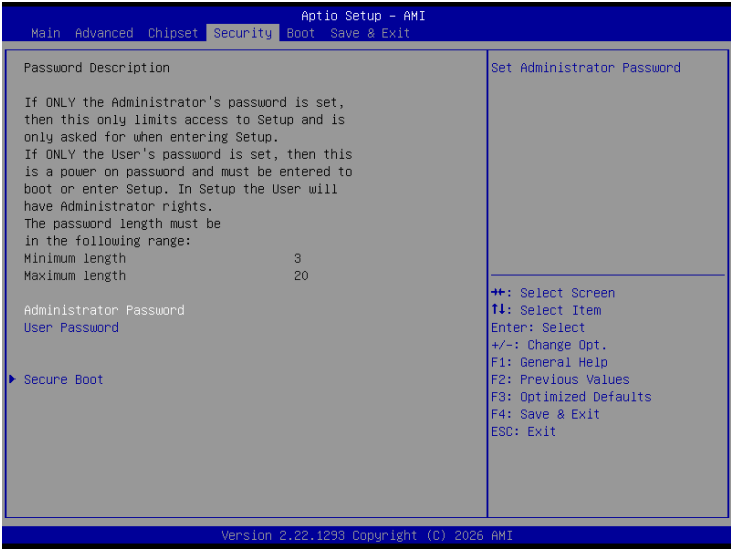

Item	Description
Administrator Password	To set up Administrator's password Minimum length : 3 Maximum length : 20
User Password	To set up User's password Minimum length : 3 Maximum length : 20
Secure Boot	Press <Enter> to configure the advanced items



Item	Description
Secure Boot	Secure Boot requires all the applications that are running during the booting process to be pre-signed with valid digital certificates Enabled : Enables Secure Boot function Disabled : Disables Secure Boot function (Default setting)
Secure Boot Mode	Standard : Standard mode Custom : Custom mode (Default setting)
Restore Factory Keys	To restore factory settings Yes : Agree to restore factory settings No : Cancel to restore factory settings
Reset To Setup Mode	Yes : Agree to setup mode No : Cancel to setup mode
Key Management	Enables expert users to modify Secure boot policy variables without full authentication Press <Enter> to configure the advanced items

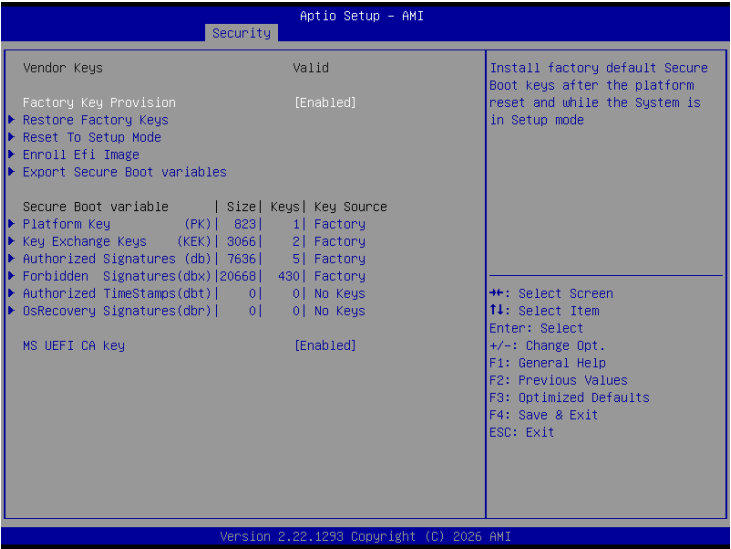


Item	Description
Factory Key Provision	Install factory default Secure Boot keys after the platform reset and while the system is in Setup mode Enabled : Enables Factory Key Provision (Default setting) Disabled : Disables Factory Key Provision
Restore Factory Keys	To restore factory settings Yes : Agree to restore factory settings No : Cancel to restore factory settings
Reset To Setup Mode	Yes : Agree to setup mode No : Cancel to setup mode
Enroll Efi Image	Allow the image to run in Secure Boot mode
Export Secure Boot variables	Copy NVRAM content of Secure Boot variables to files in a root folder on a file system device

Item	Description
Platform Key (PK)	These items allows you to enroll factory defaults or load Certificates from a file.
Key Exchange Keys (KEK)	
Authorized Signatures (db)	
Forbidden Signatures (dbx)	
Authorized TimeStamps (dbt)	
OsRecovery Signatures (dbr)	Enabled : Enables MS UEFI CA Key (Default setting) Disabled : Disables MS UEFI CA Key
MS UEFI CA key	


4.6 Boot

This Boot menu allows you to set/change system boot options

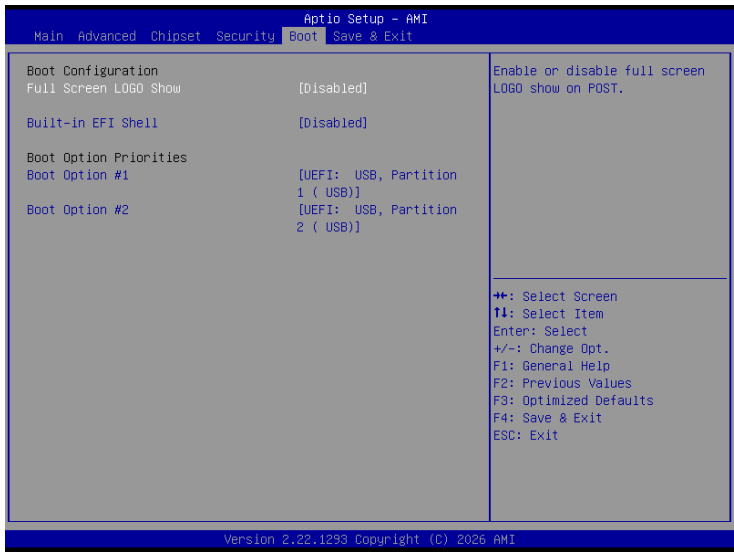

Item	Description
Full Screen LOGO Show	Enable/Disable full screen LOGO show on POST screen Enabled : Enables Full screen LOGO Show on POST screen Disabled : Disables Full screen LOGO Show on POST screen (Default setting)
Built-in EFI Shell	Enabled : Enables Built-in EFI Shell Disabled : Disables Built-in EFI Shell (Default setting)
Boot Option Priorities	Shows the information of the storage that be installed in the system Choose/set the boot priority

4.7 Save & Exit

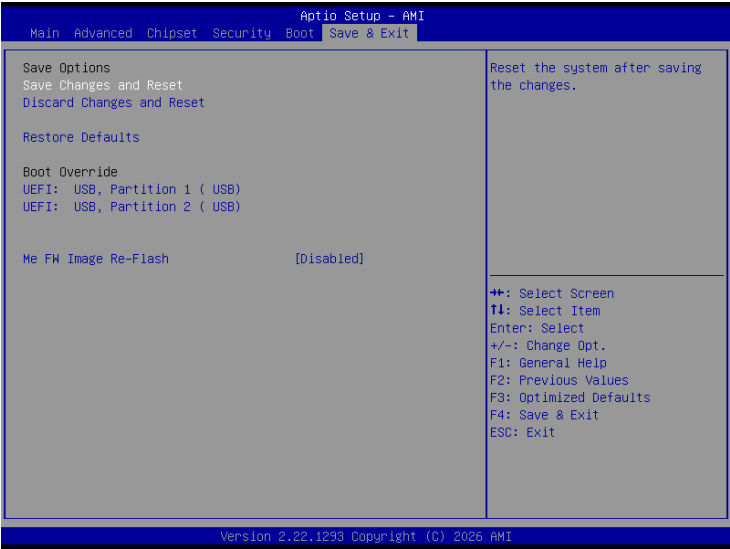

Item	Description
Save Changes and Reset	After configuring all the options that you wish to change, choose this option to save all the changes and reboot the system Yes : Agree to save and reset No : Cancel to save and reset
Discard Changes and Reset	Choose this option to reboot the system without saving any changes Yes : Agree to discard changes and reset No : Cancel to discard changes and reset
Restore Defaults	Restore/Load default values for all the setup options Yes : Agree to load optimized defaults No : Cancel to load optimized defaults
Me FW Image Re-Flash	Enable/Disable Me FW image re-flash function Enabled : Enables Me FW image re-flash function Disabled : Disables Me FW image re-flash function (Default setting)